


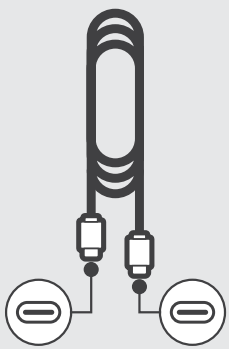


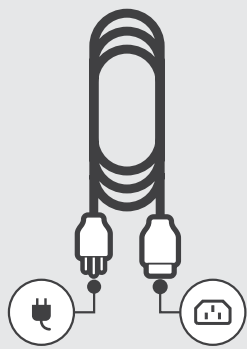


Dell Pro 32 Plus QHD USB-C Hub Monitor
P3225DE

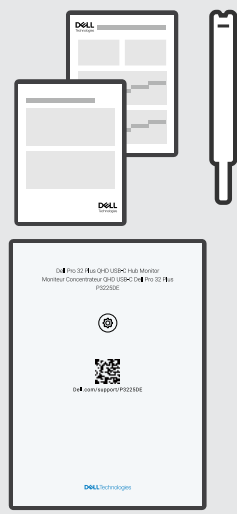

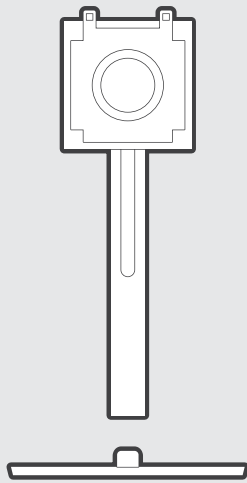


USB-C

USB-C

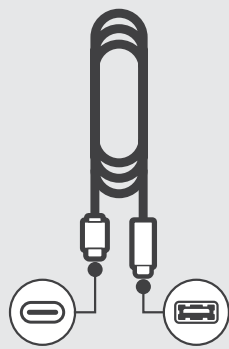


USB-C




USB Type-A

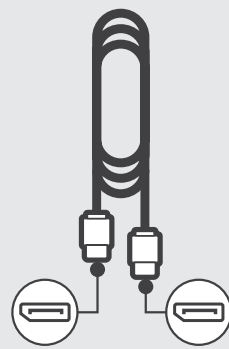



DP


DP


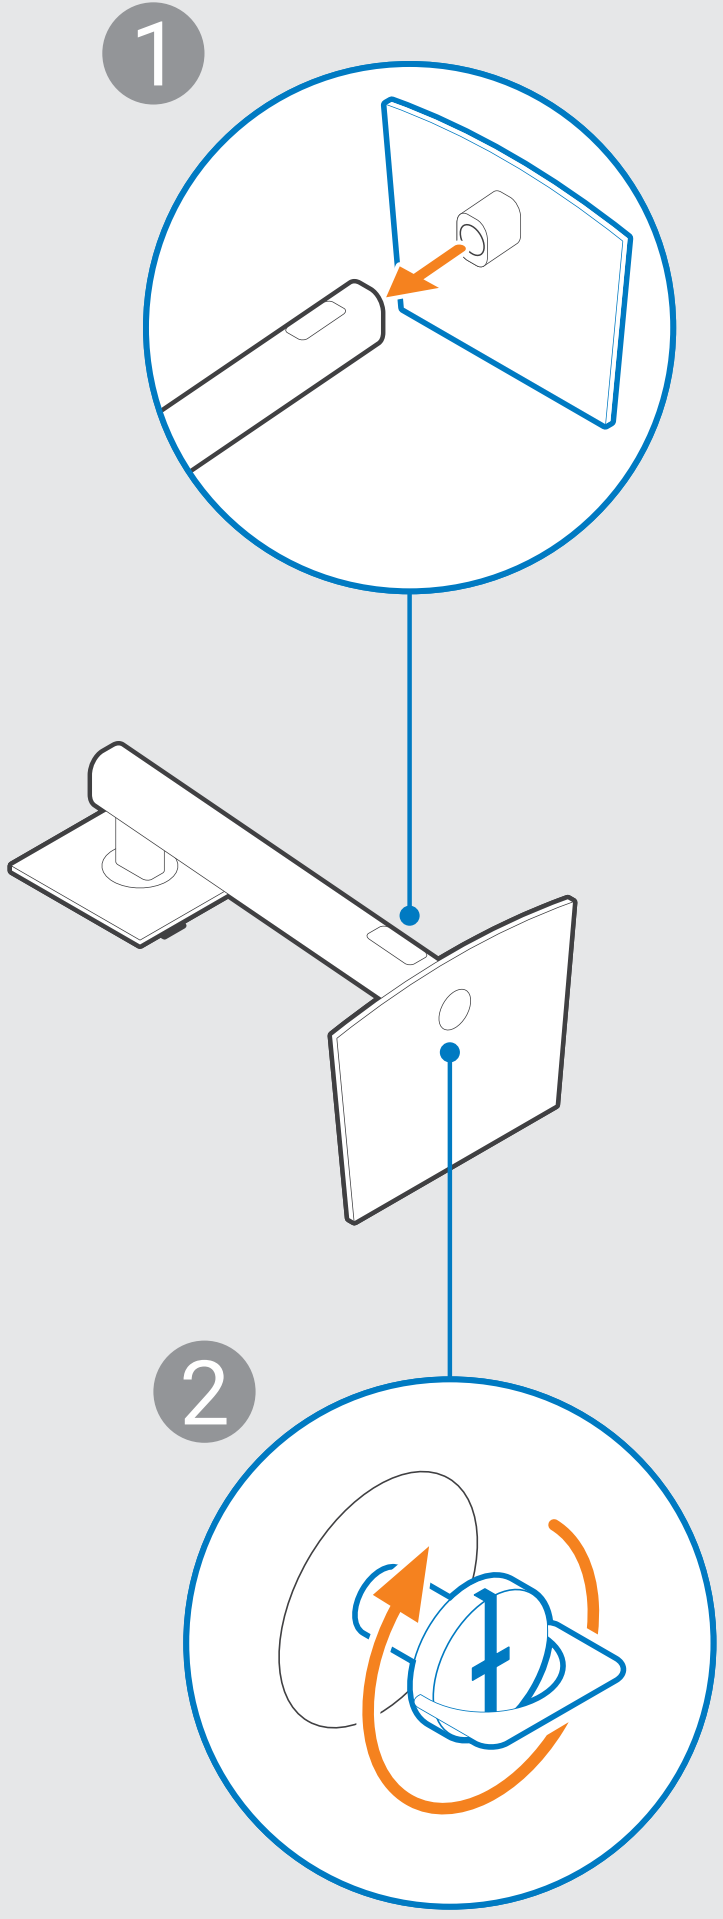


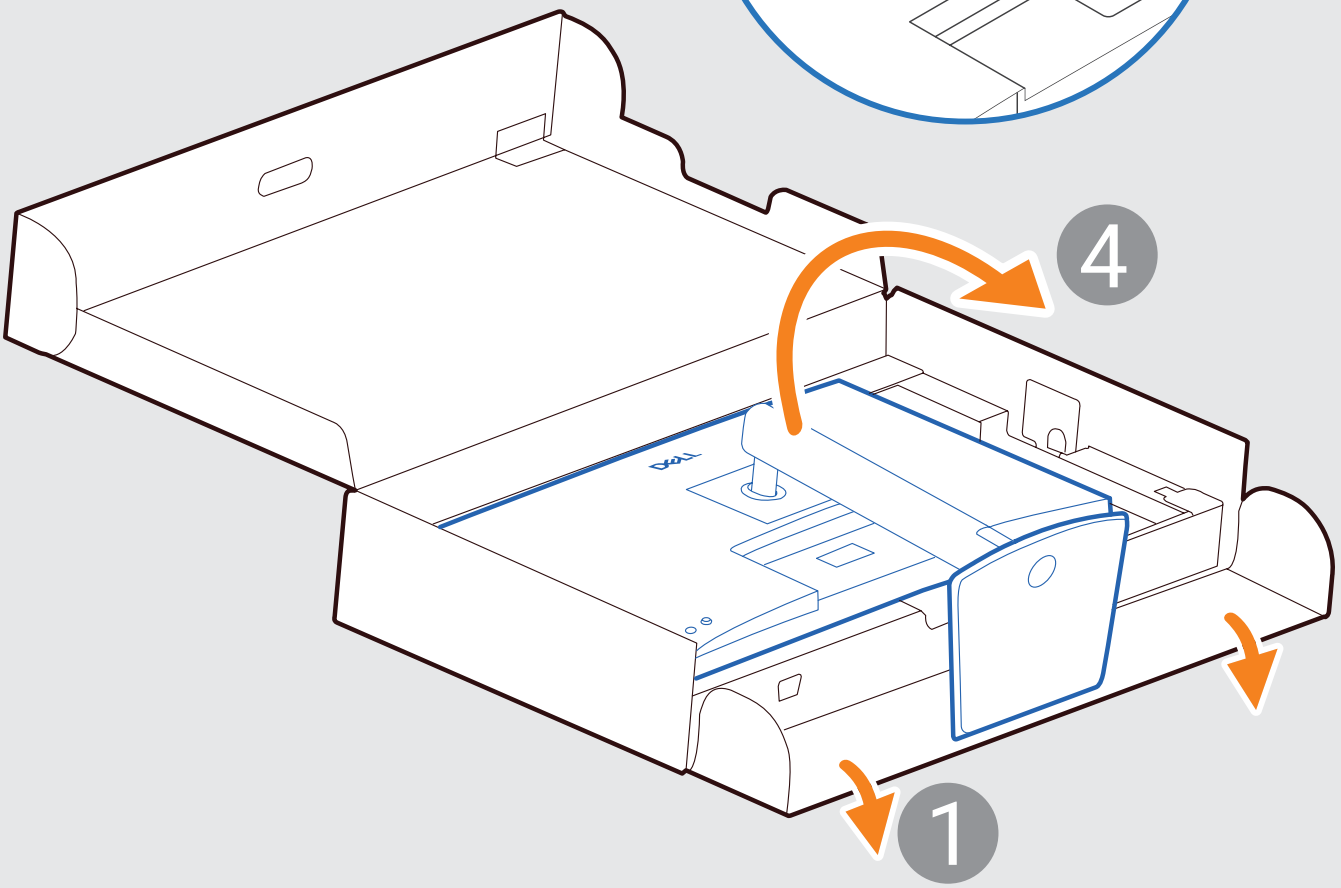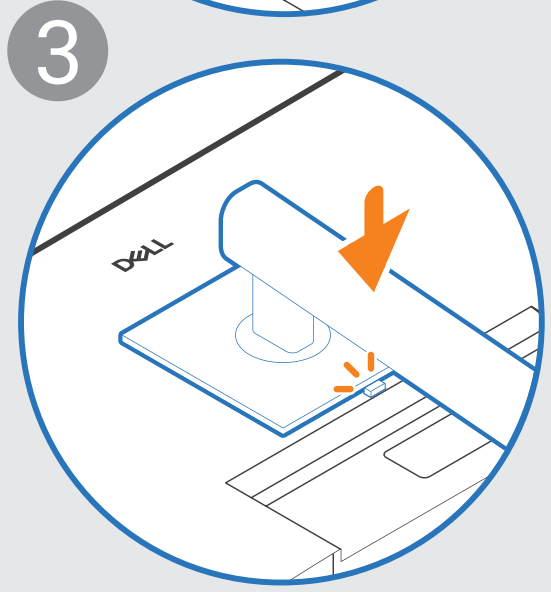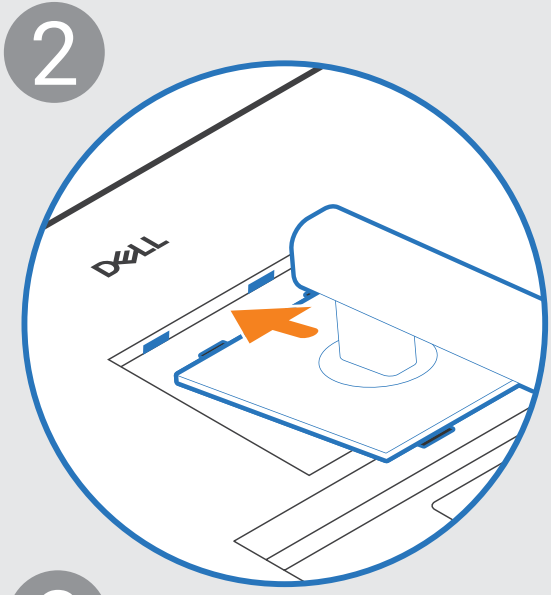


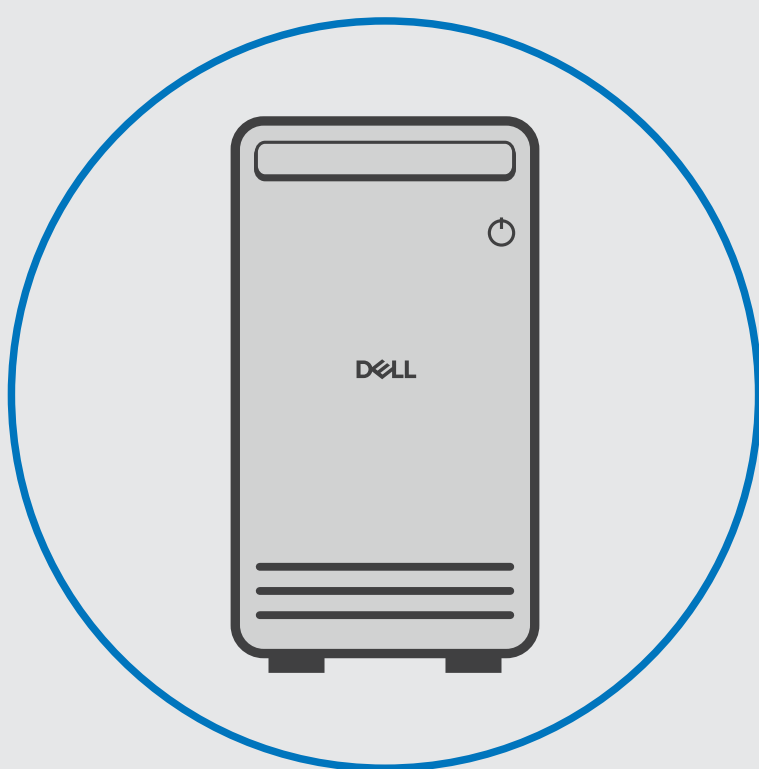


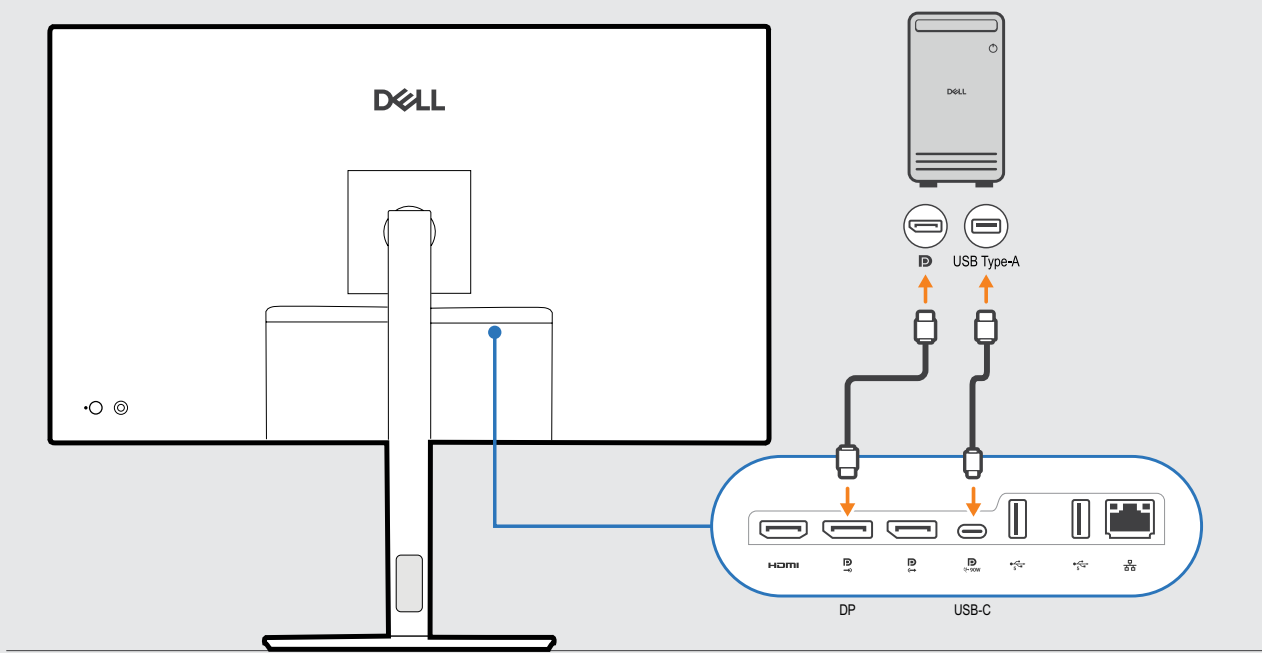

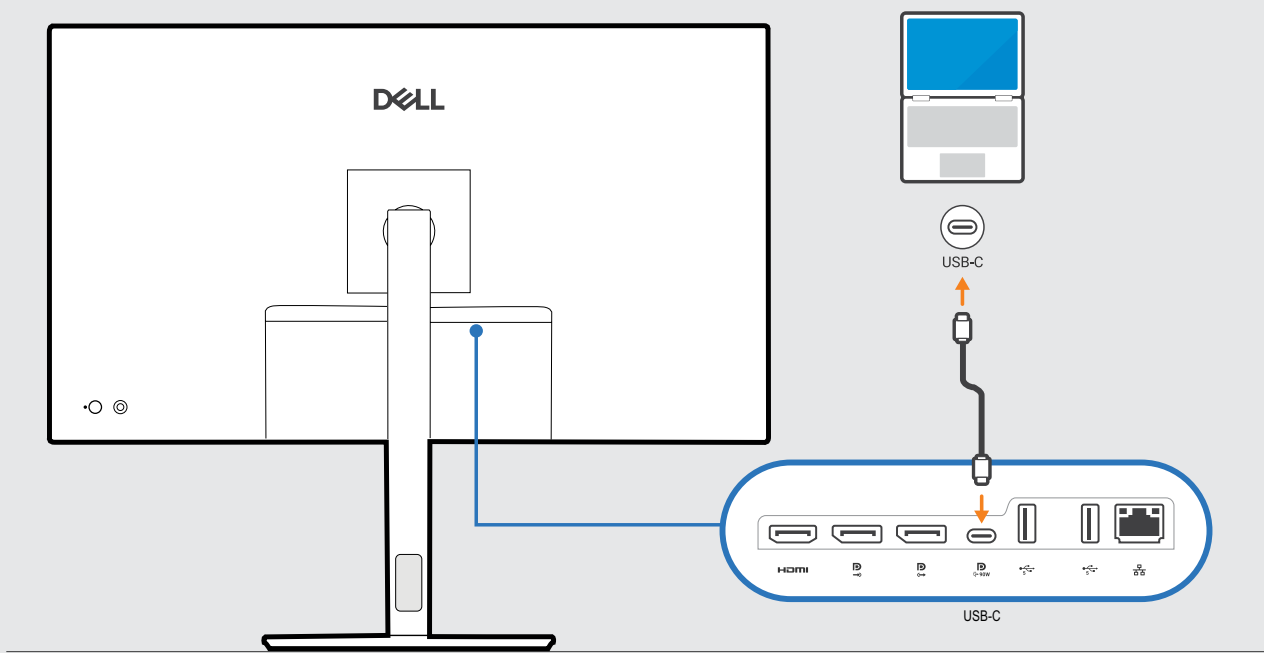


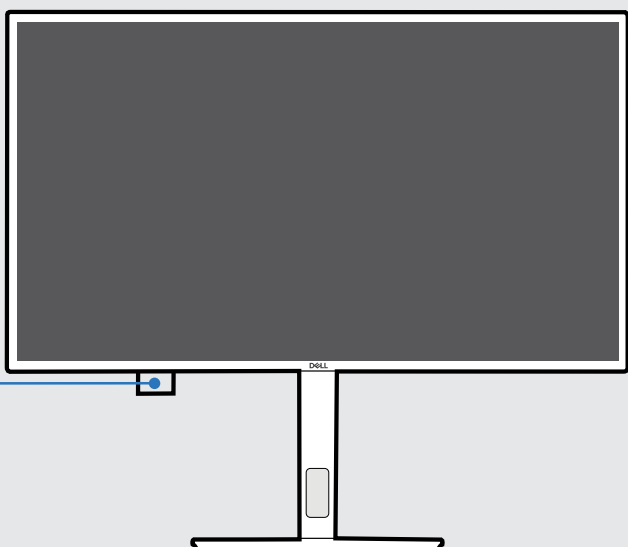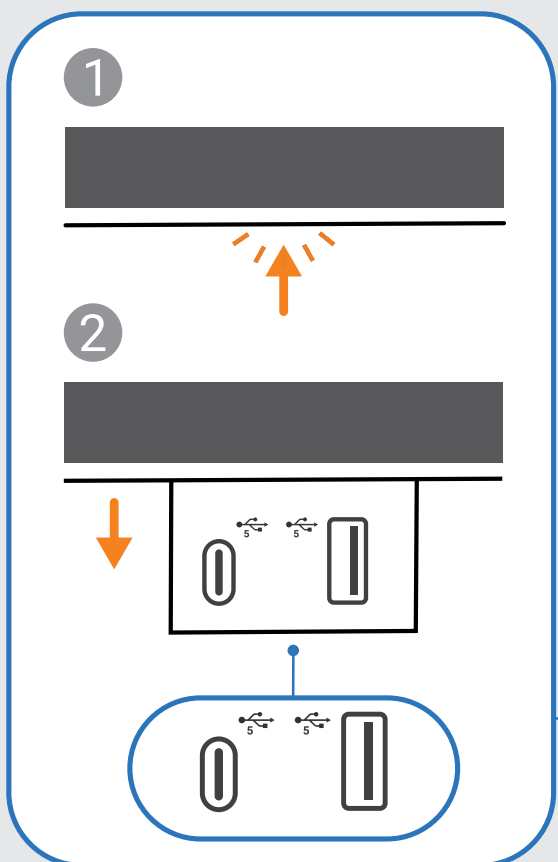

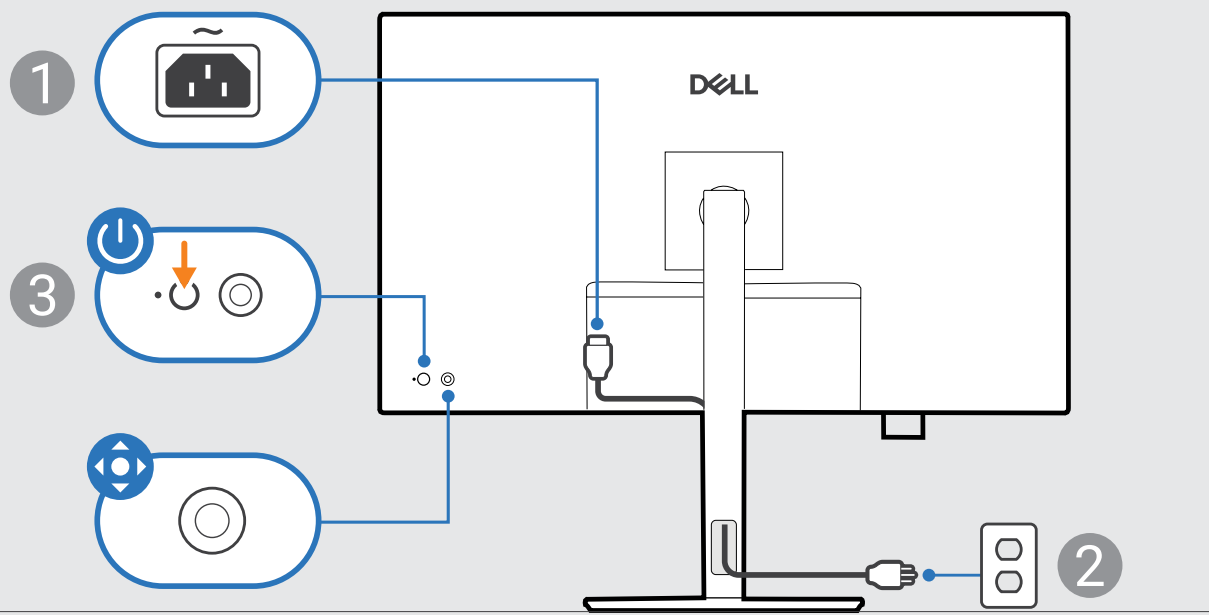


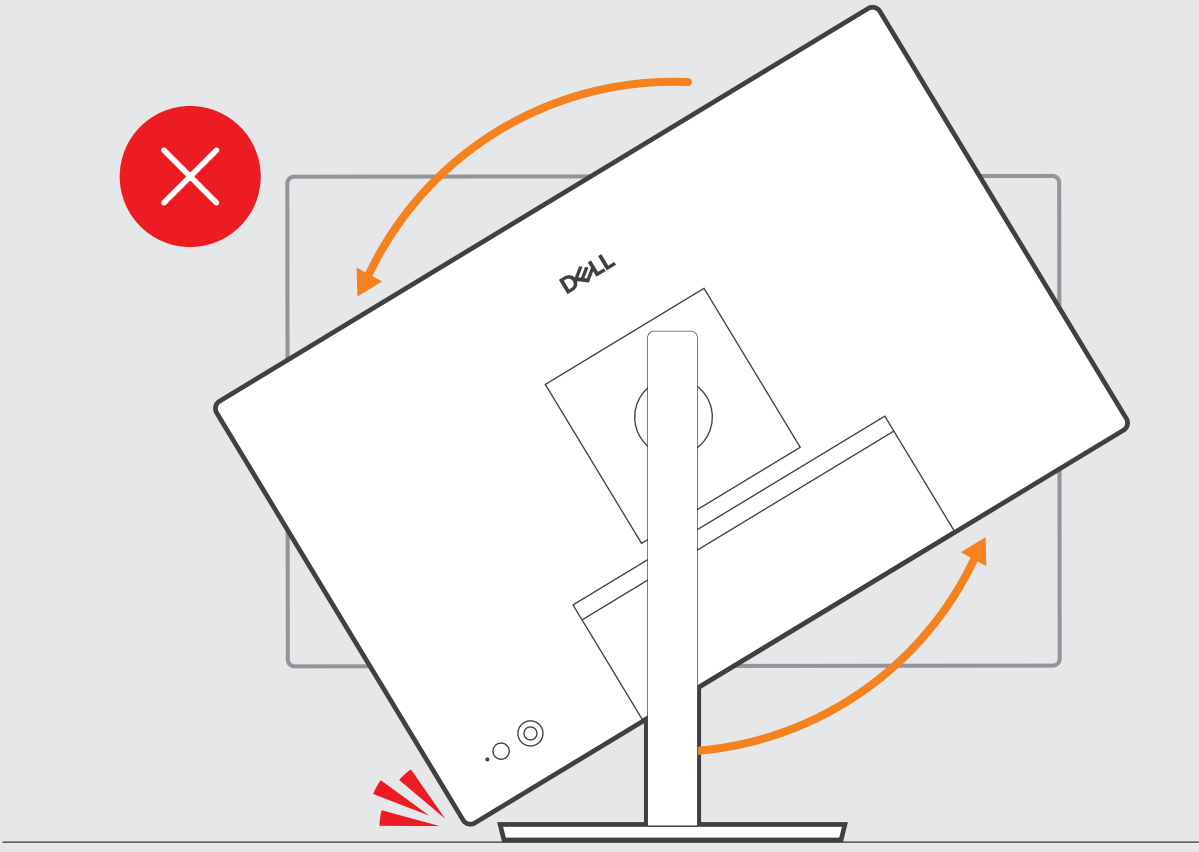



1

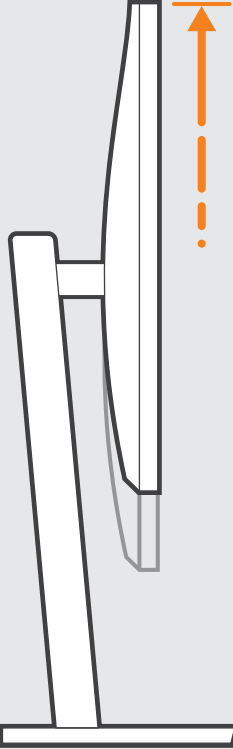


2

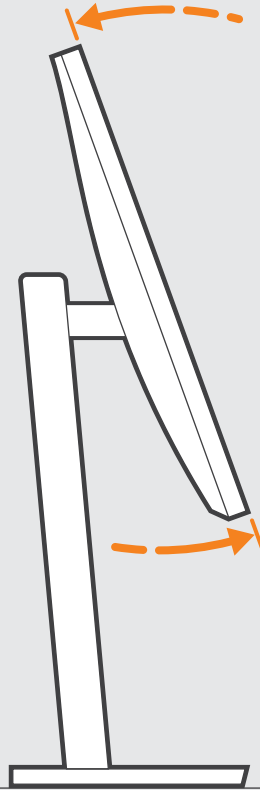


3

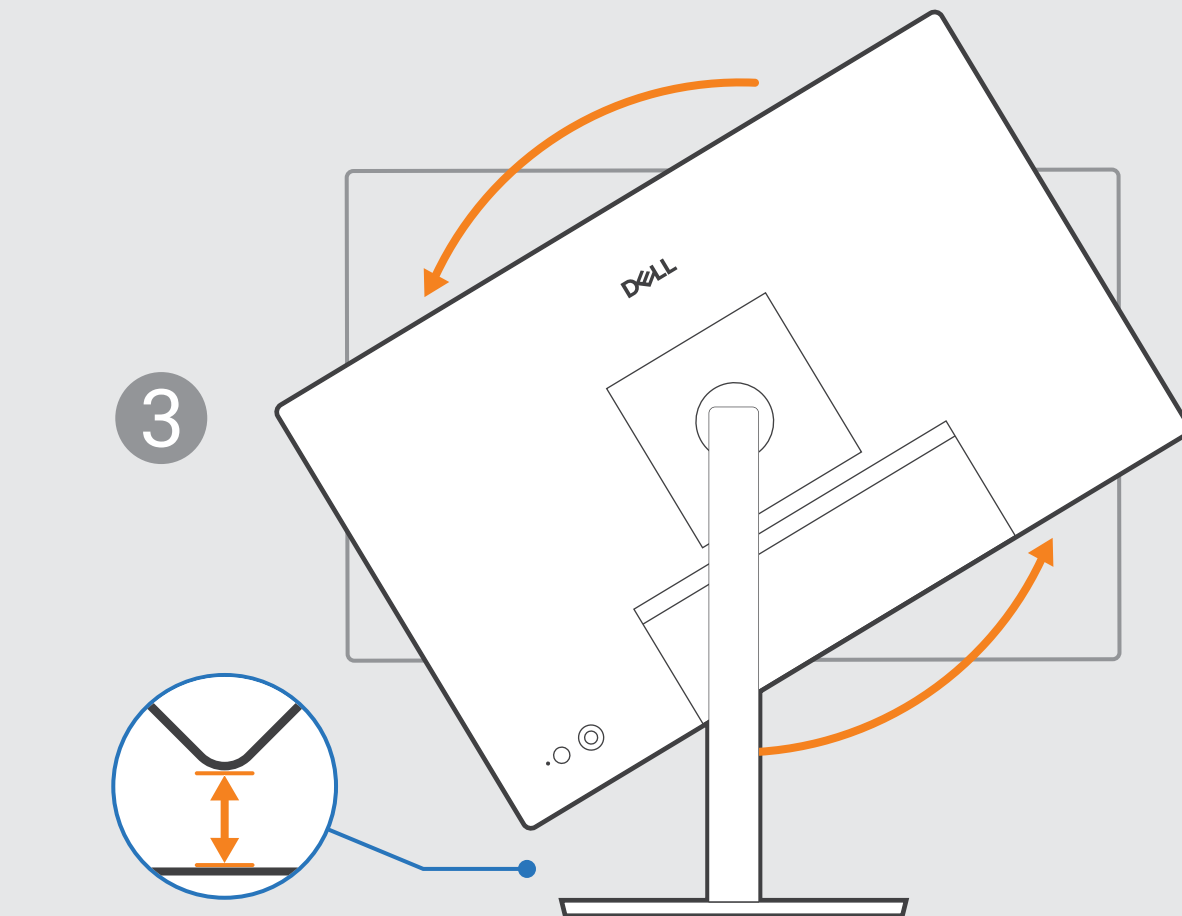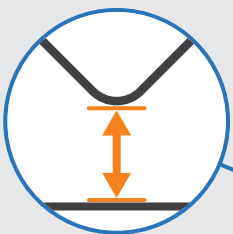


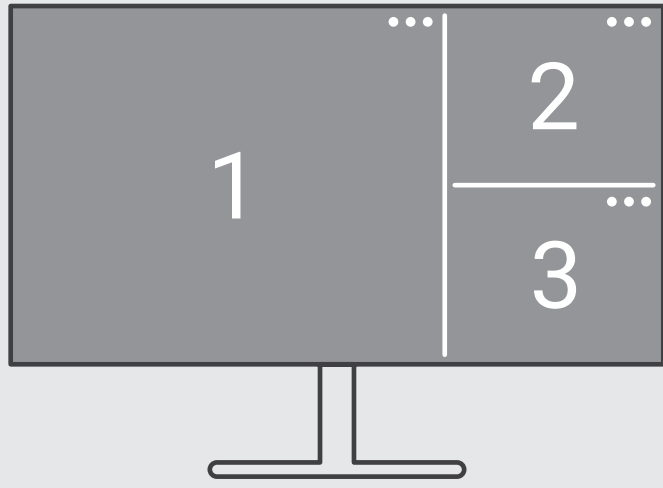

Dell Display and Peripheral Manager
Dell.com/support/ddpm

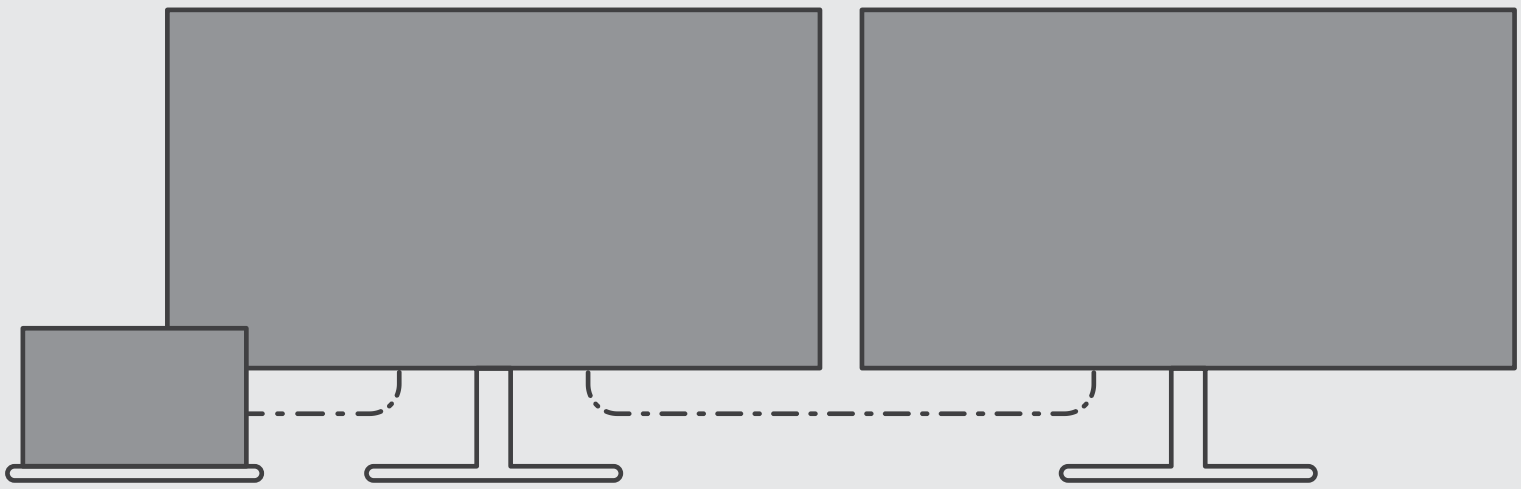

Daisy Chain

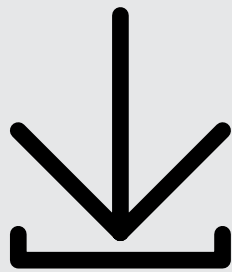

Dell.com/support/P3225DE